# K30

## PREVENTIVE MAINTENANCE





## **K30** RECOMMENDED SPARE PARTS LIST

AMOUNT	DESCRIPTION	ARTICLE NUMBER
1	Bean hopper	309559
1	Power board	101655
1	Capacitor	305743
1	Residue tray	306340
1	Grinder casing set	101145
1	Processor board	308389
1	Display K30	307244
1	Small parts set	308387
1	Micro switch	306720
5	Silicone flapper 17 mm	310139
5	Silicone flapper 15.8 mm	101518
2	Set of burrs	306715
1	Burr changing tool	101066

### **K30** BASIC STOCK PROPOSAL CLEANING PROCESS

#### 1. CLEANING:

Always unplug the coffee grinder before cleaning.

- Apply dry cleaning only. If necessary use suitable mild "dish" washer detergent
- No alkaline cleaning agent must be used for cleaning (affects-flavour)
- Do not spray coffee grinder with water and/or steam (risk of short circuit)
- Clean your grinder periodically, at least once a week.
- Please use MAHI KÖNIG GRIND7™

### Cleaning of housing:

 Use paper towel along with mild dish washer detergent to clean the housing, cover lid and inside the hopper

## Cleaning of spout tube:

 Use a vacuum cleaner to exhaust the discharge tube. The use of brushes can lead to the damage of the built-in flappers resulting in a an inaccurate grinding result.

Periodic checking of the grinder, burrs and grinding quality must only be performed by competent service personnel and/or trained staff.

#### 2. ROUTINE CHECK:

#### **Indications:**

- · Reduction of the output of the grinder.
- Temperature increase of the ground coffee
- · Inconsistent grind
- Increased amount of dust
- Grinder clogs more often

#### 3. MAINTENANCE:

#### Short-term maintenance every 2 weeks

- Outside cleaning including the hopper
- Use GRINDZ™

## Long-term maintenance once a year

- Thorough cleaning of the grinder including the opening of the grinder housing and removing of all coffee residues
- Change of burrs
- · Checking calibration and re-calibrate, if necessary

