K30 VARIO AIR

PREVENTIVE MAINTENANCE





K30 VARIO AIR RECOMMENDED SPARE PARTS LIST

| AMOUNT | DESCRIPTION | ARTICLE NUMBER |
|--------|---|----------------|
| 1 | Hopper complete with Lid | 309559 |
| 1 | Power board K30 ES UL/CE 230 V, service pack | 101655 |
| 1 | Running capacitor 10 μF (200 - 230 V / 50Hz | 305743 |
| 1 | Processor board UL/CE, service pack | 308389 |
| 1 | Burrs set EK11 - K30 Vario | 306715 |
| 10 | Silicone flapper EK11b: silicone flapper Ø15,8 mm | 101518 |
| | EK11b: silicone flapper Ø17 mm. Valid from serial no. 523569 | 310139 |
| 1 | Display K30 Vario | 307244 |
| 1 | Micro switch, service pack | 306720 |
| 1 | Rocker switch knob, service pack | 306722 |
| 1 | Portafilter mounting | 306307 |
| 1 | Flat spring EK11a, Service Pack (pack of 5) | 310520 |
| 1 | Grind adjustment key K30 Vario | 306590 |
| 1 | Tool for disc change in EK11b, built in grinder | 101066 |
| 1 | Circuit Breaker CBE-4A, service pack | 309551 |
| 1 | Small parts set, grind adjustment cover K30 Vario | 308387 |
| 1 | Fan 4028X. K30 Air assembled with cable | 102115 |
| 1 | Board for temperature control for fan 12 V/0,5 A incl. cables | 101784 |

K30 VARIO AIR BASIC STOCK PROPOSAL CLEANING PROCESS

1. CLEANING:

Always unplug the coffee grinder before cleaning.

- Apply dry cleaning only. If necessary use suitable mild "dish" washer detergent
- No alkaline cleaning agent must be used for cleaning (affects-flavour)
- Do not spray coffee grinder with water and/or steam (risk of short circuit)
- Clean your grinder periodically, at least once a week.
- Please use MAHI KÖNIG GRIND7™

Cleaning of housing:

 Use paper towel along with mild dish washer detergent to clean the housing, cover lid and inside the hopper

Cleaning of spout tube:

 Use a vacuum cleaner to exhaust the discharge tube. The use of brushes can lead to the damage of the built-in flappers resulting in a an inaccurate grinding result.

Periodic checking of the grinder, burrs and grinding quality must only be performed by competent service personnel and/or trained staff.

2. ROUTINE CHECK:

Indications:

- · Reduction of the output of the grinder.
- · Temperature increase of the ground coffee
- · Inconsistent grind
- Increased amount of dust
- Grinder clogs more often

3. MAINTENANCE:

Short-term maintenance every 2 weeks

- Outside cleaning including the hopper
- Use GRINDZ™

Long-term maintenance once a year

- Thorough cleaning of the grinder including the opening of the grinder housing and removing of all coffee residues
- Change of burrs
- · Checking calibration and re-calibrate, if necessary

