

TANZANIA

PREVENTIVE MAINTENANCE



www.mahlkoenig.de



TANZANIA RECOMMENDED SPARE PARTS LIST

AMOUNT	DESCRIPTION	ARTICLE NUMBER
1	Spout with spring	243343
1	Residue tray	310248
1	Grind size adjustment cone	310268
2	Pair of burrs	700738
1	Grind size adjustment knob	310267
1	Conical axle	310268
1	Power board, complete 200 - 240 V 50/60 Hz	220434
1	Power board, complete 120 V/60 Hz	220426
1	Power board, complete 100 V/60 Hz	220435
1	Power board, complete 100 V/50 Hz	243387
1	Switch 16 A 250 V green	257432
1	Hopper, complete 750 g	700322
1	Capacitor 35 μ F, 250 VAC P2 UL (120 V 60 Hz)	257334
1	Capacitor 70 μ F, 250 VAC P2 UL (100 V 50 Hz)	257341
1	Capacitor 50 μ F, 250 VAC P2 UL (100 V 60 Hz)	310286
1	Capacitor 16 μ F, 440 VAC (220 - 240 V 50/60 Hz)	257326

TANZANIA RECOMMENDED SPARE PARTS LIST

AMOUNT	DESCRIPTION	ARTICLE NUMBER
1	Circuit breaker 10A (100 V 50 Hz)	310322
1	Circuit breaker 15A (100 V 60 Hz)	257127
1	Circuit breaker 3A (220 - 240 V 50/60 Hz)	257126
1	Microswitch	257431
1	Rotating disc flange ø 80 mm magnet	310316
1	Stationary disc flange ø 80 mm	310323
1	Felt ring	242639
1	Rubber tube	240125
2	Tension Spring	104941

TANZANIA BASIC STOCK PROPOSAL CLEANING PROCESS

1. CLEANING:

Always unplug the coffee grinder before cleaning.

- Apply dry cleaning only. If necessary use suitable mild „dish“ washer detergent
- No alkaline cleaning agent must be used for cleaning (affects-flavour)
- Do not spray coffee grinder with water and/or steam (risk of short circuit)
- Clean your grinder periodically, at least once a week.
- Please use MAHLKÖNIG GRINDZ™

Cleaning of housing:

- Use paper towel along with mild dish washer detergent to clean the housing, cover lid and inside the hopper

Cleaning of spout tube:

- Use a vacuum cleaner to exhaust the discharge tube. The use of brushes can lead to the damage of the built-in flappers resulting in an inaccurate grinding result.

Periodic checking of the grinder, burrs and grinding quality must only be performed by competent service personnel and/or trained staff.

2. ROUTINE CHECK:

Indications:

- Reduction of the output of the grinder.
- Temperature increase of the ground coffee
- Inconsistent grind
- Increased amount of dust
- Grinder clogs more often

3. MAINTENANCE:

Short-term maintenance every 2 weeks

- Outside cleaning including the hopper
- Use GRINDZ™

Long-term maintenance once a year

- Thorough cleaning of the grinder including the opening of the grinder housing and removing of all coffee residues
- Change of burrs
- Checking calibration and re-calibrate, if necessary



Hemro International AG

Längenstrasse 34 | 8184 Bachenbülach, Schweiz

T: +41 44 864 18 00 | F: +41 44 864 18 01

info@hemrogroup.com | www.hemrogroup.com